

1/4

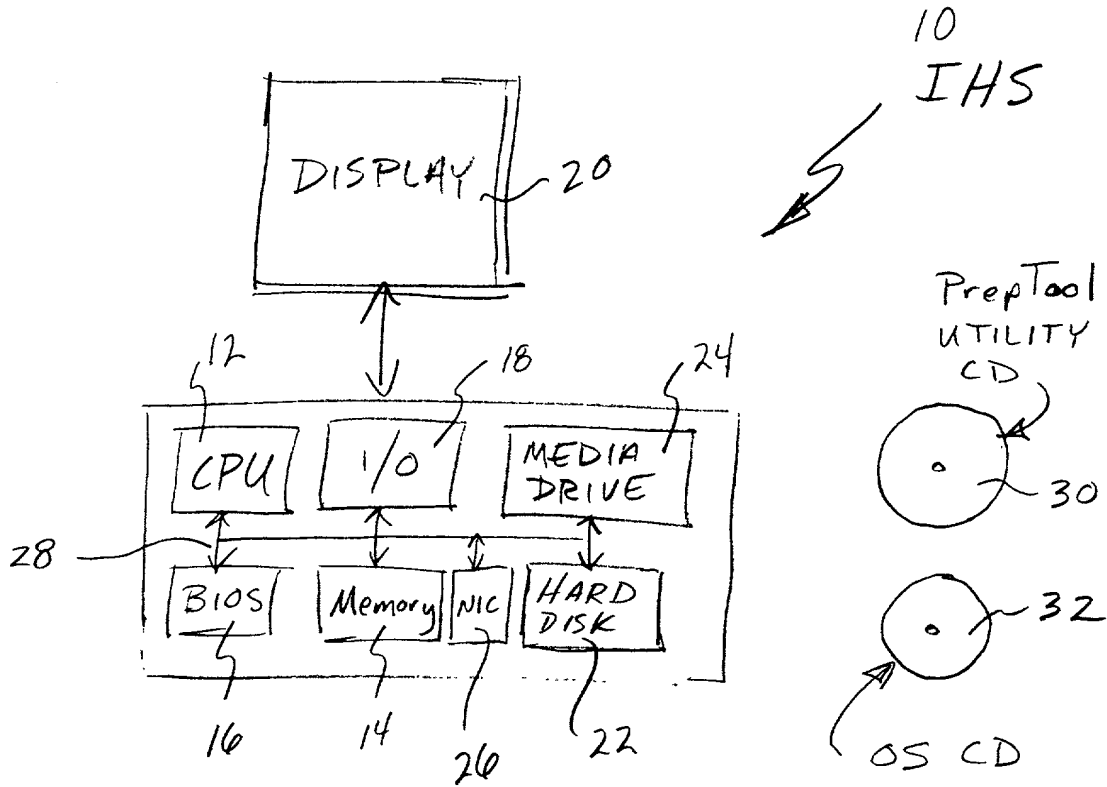


FIG. 1

2/4

16356.686

2 of 4


Automated Operating System Upgrade

FIG. 2

DC-03130
16356.686

3/4

580

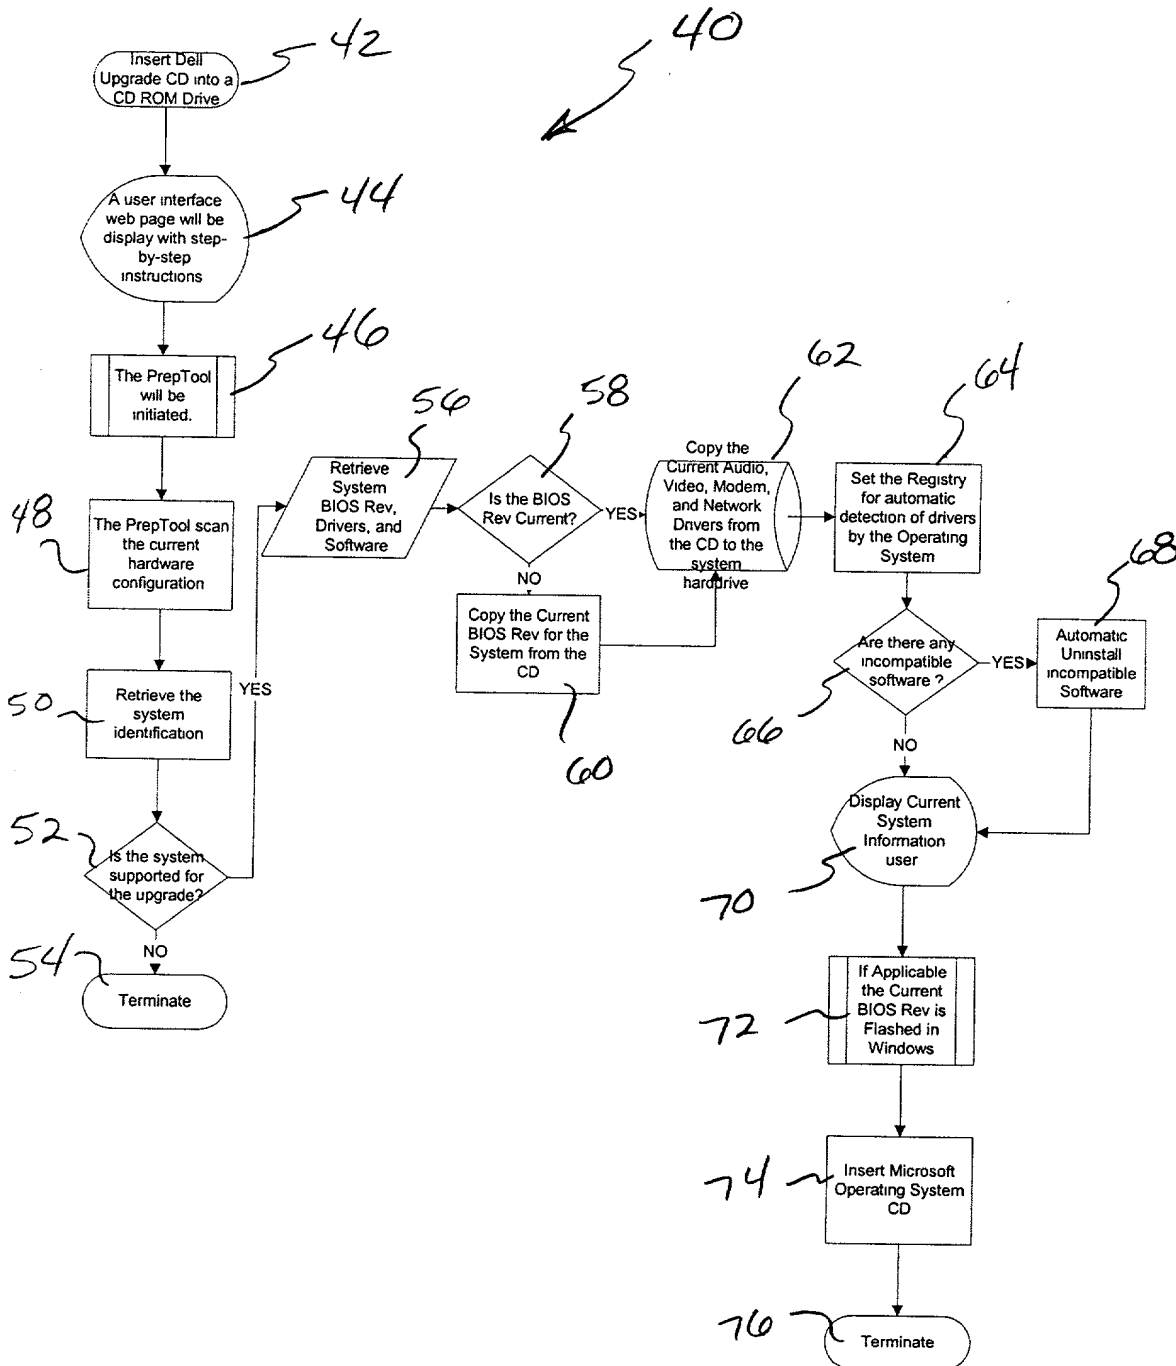

- 1 Locate the Printed Instructions
- 2 Run the PrepTool
- 3 Upgrade the BIOS
- 4 Upgrade the Operating System
- 5 Reinstall Software
- 6 Upgrade Subscription to AOL

System Information

Dell Service Tag	49NFG01
Current Bios Version	A06
Current System ID	Inspiron 8000e
Operating System	Windows 2000
Video Driver	ATI Mobility M4
Audio Driver	ESS Maestro PCI Audio (WDM)
Modem Driver	LT Win Modem
Network Driver	Intel 8255x-based PCI Ethernet Adapter (10/100)

82 84 86

98

96 94 92 90 88

FIG. 3

2000-11-13 14:38:00

4/4

100

DELL**1** Locate the Printed Instructions**3** Upgrade the BIOS**5** Reinstall Software**2** Run the PreTool**4** Upgrade the Operating System**6** Upgrade/Subscribe to AOL

Step 3 : Upgrade the BIOS

98

NOTE: (For portable computer users) If your computer does not have an internal floppy drive and internal CD-ROM drive, insert the CD-ROM drive into your computer's media bay, and connect your external floppy drive to your computer using the external floppy drive cable.

NOTE: (For portable computer users) If your computer does not have an external floppy drive or you cannot connect one to your computer, go to "[Special BIOS Update Instructions](#)" for information about how to update the BIOS.

1. Insert a blank floppy disk into your floppy drive.
2. Click on the BIOS link to download the BIOS to the floppy disk.

Inspiron 8000 A17

FIG. 4

DC-03130
16356.686